




MobileMustHave
MOBILE LIFESTYLE SOLUTIONS

Full Timer Bundle Antenna Wiring Diagram
Pepwave BR1 Mk2/Poynting MIMO-3 5-in-1
Wiring Diagram
Version 1.1
Author: Erik McCauley

The Pepwave Max BR1 MK2 is included in our Full Timer bundle. Wiring can be confusing as the antenna and modem are made by different manufacturers. The following wiring diagram shows our recommendations on how to hook up the Poynting MIMO-3 5-in-1 antenna to the Pepwave Max BR1 MK2.



ALERT:
ADAPTERS REQUIRED
RP-SMA to SMA ADAPTERS
INCLUDED IN ANTENNA
ACCESSORY BAG.

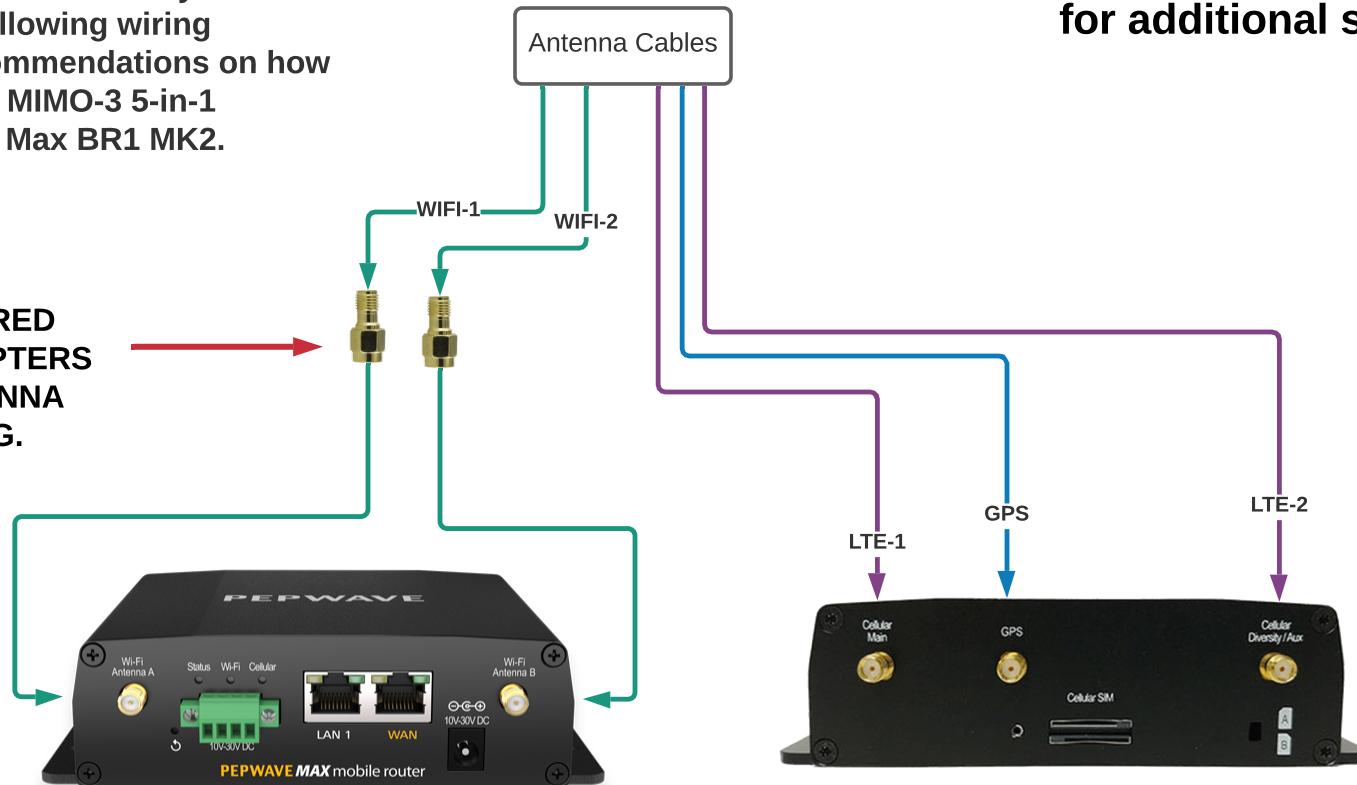

Note:
Line color in diagram matches
color of label on antenna cable.

QUESTIONS?

Email: info@mobilemusthave.com
Chat: mobilemusthave.com

Notice:

If wires are tight, cut back heat
shrink on antenna cable housing
for additional slack.